


SAF-S OR SAB-S INSTALLATION DIAGRAM W/ 4 ACTUATORS

SAF-S OR SAB-S
(REAR VIEW W/ TEXT UP)

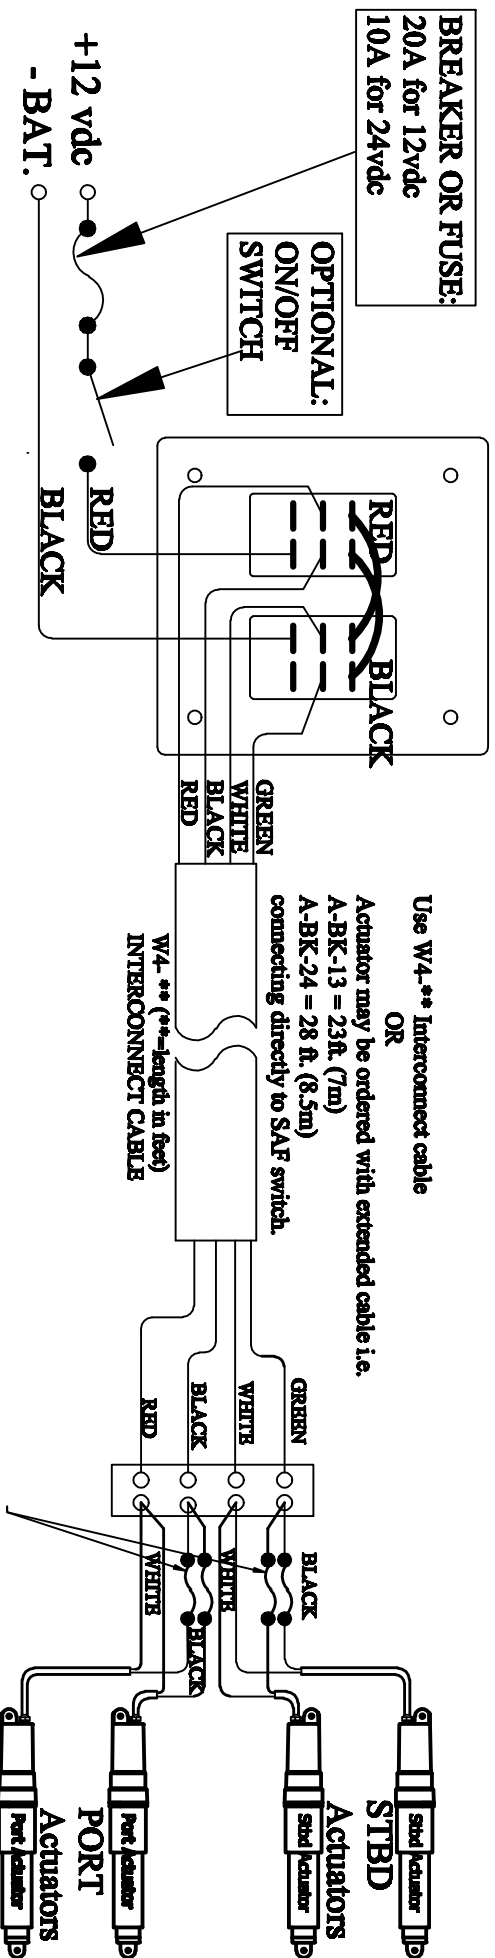

Fuse Note:
For 2 actuators per tab applications, a fuse must be attached to each actuator's black wire as shown. Fuse size not to exceed 10 amps for 12vdc and 5 amps for 24vdc. Please call Lectrotab for fuse sizing (888-532-8768).